

00000000000000000000000000000000

Fig. 1

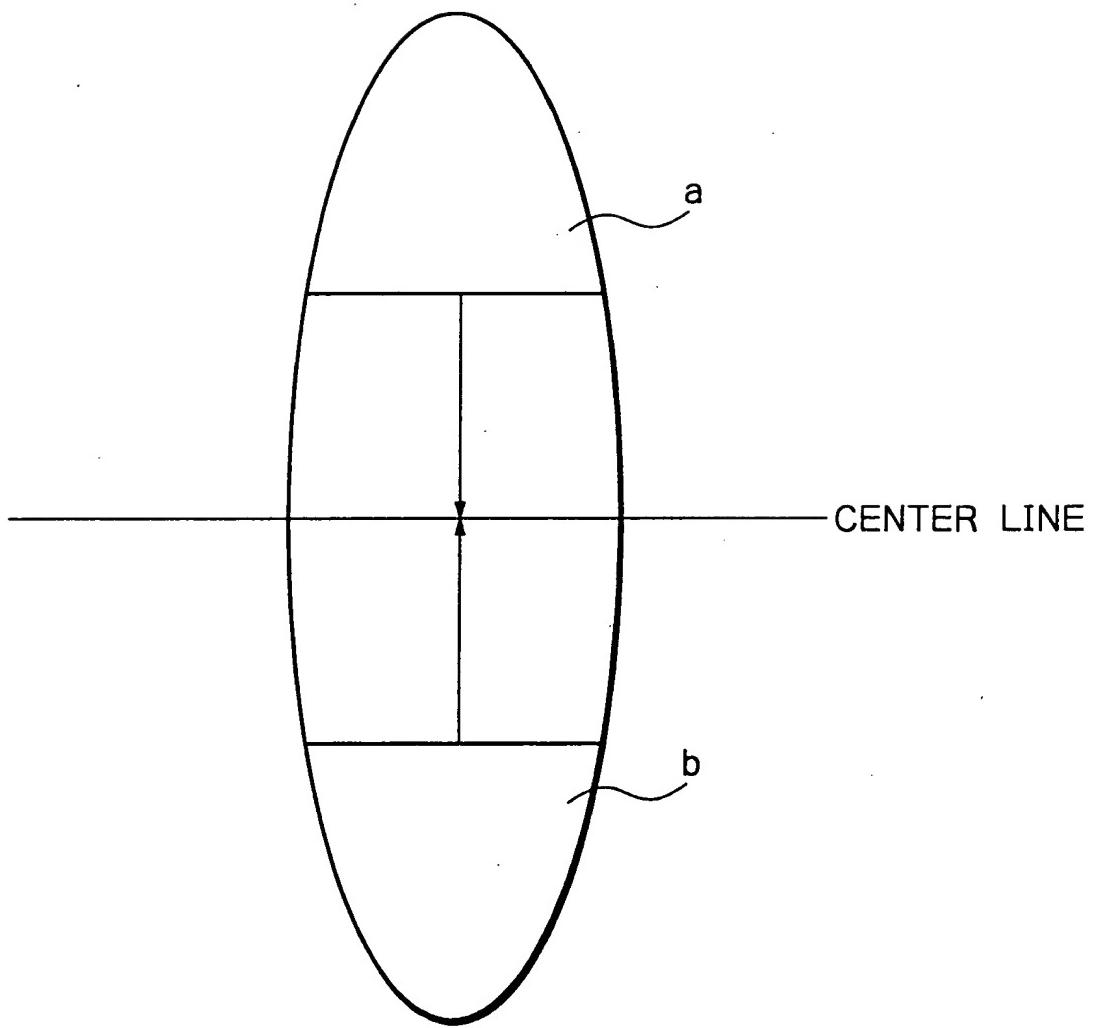


Fig. 2


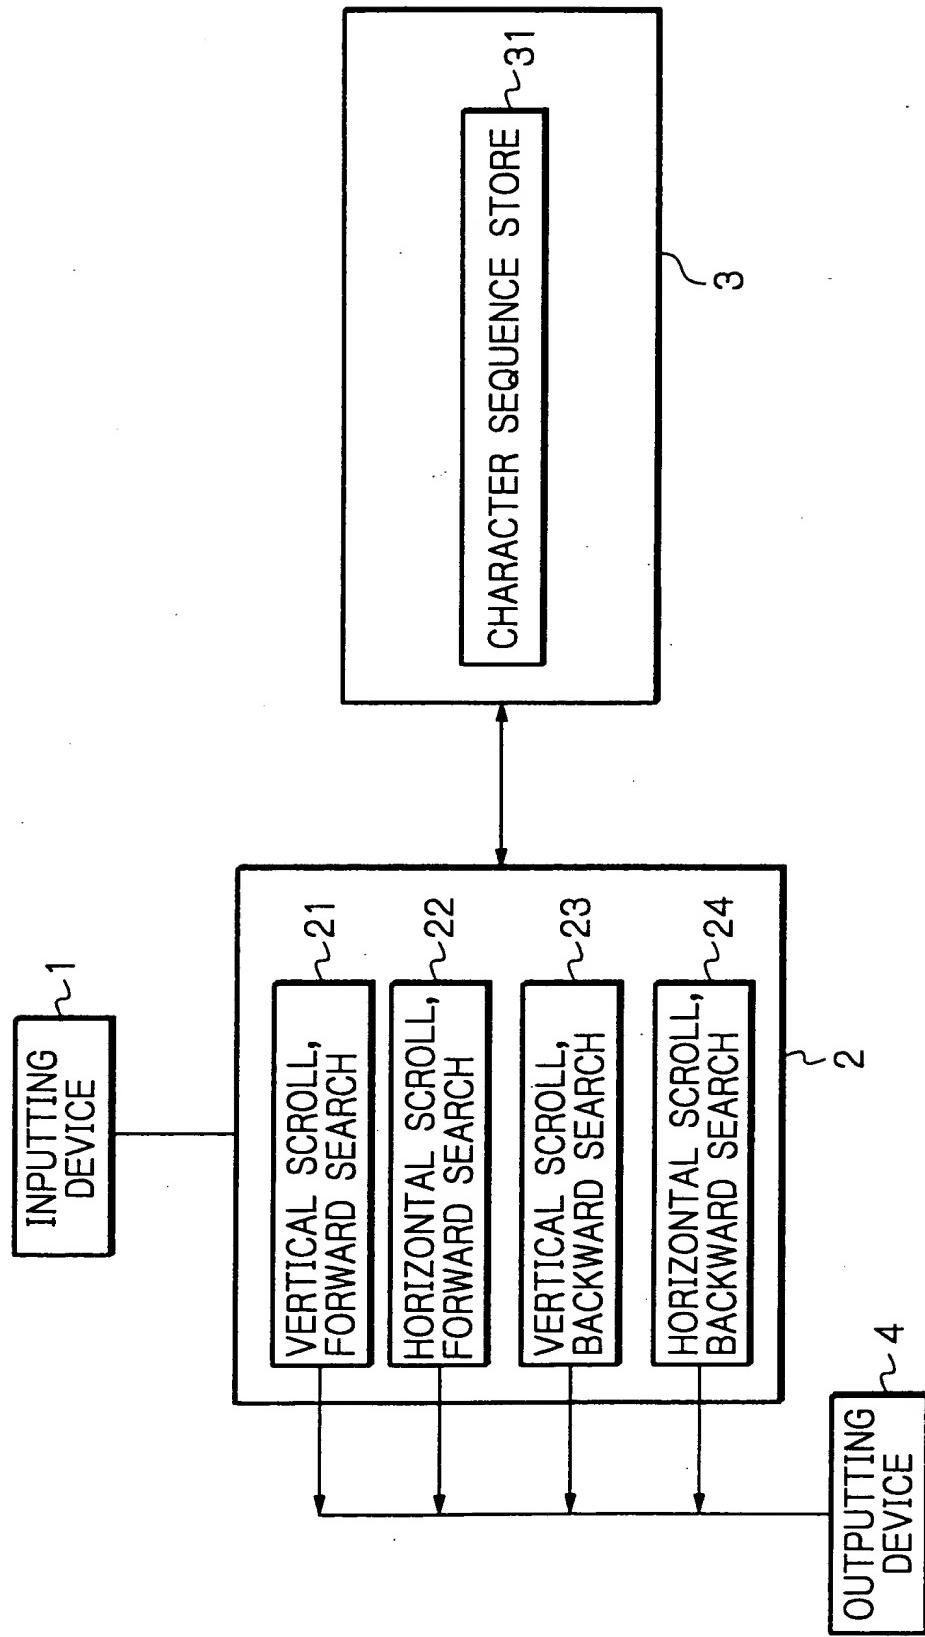


Fig. 3

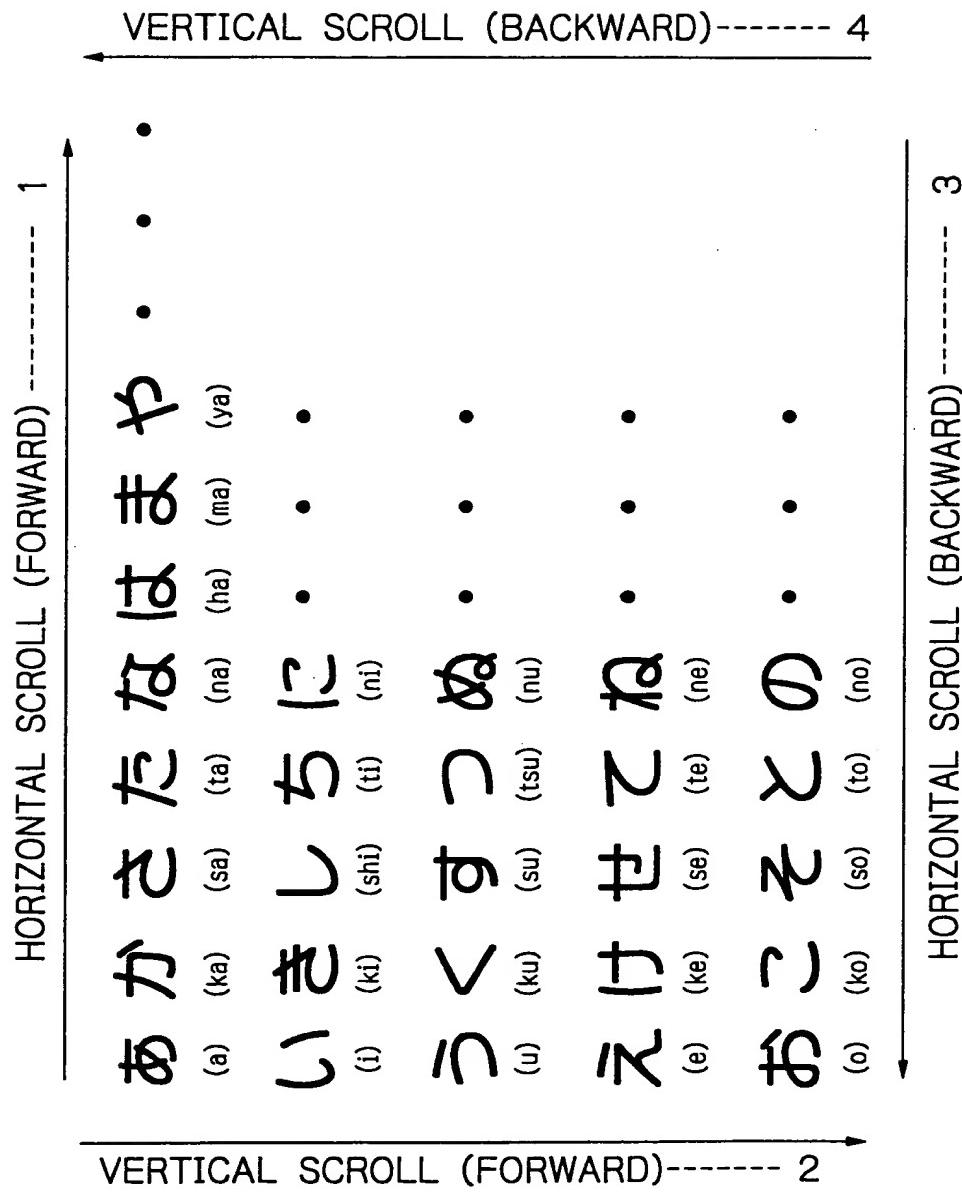

TOEPLITZ SET 6610

Fig. 4

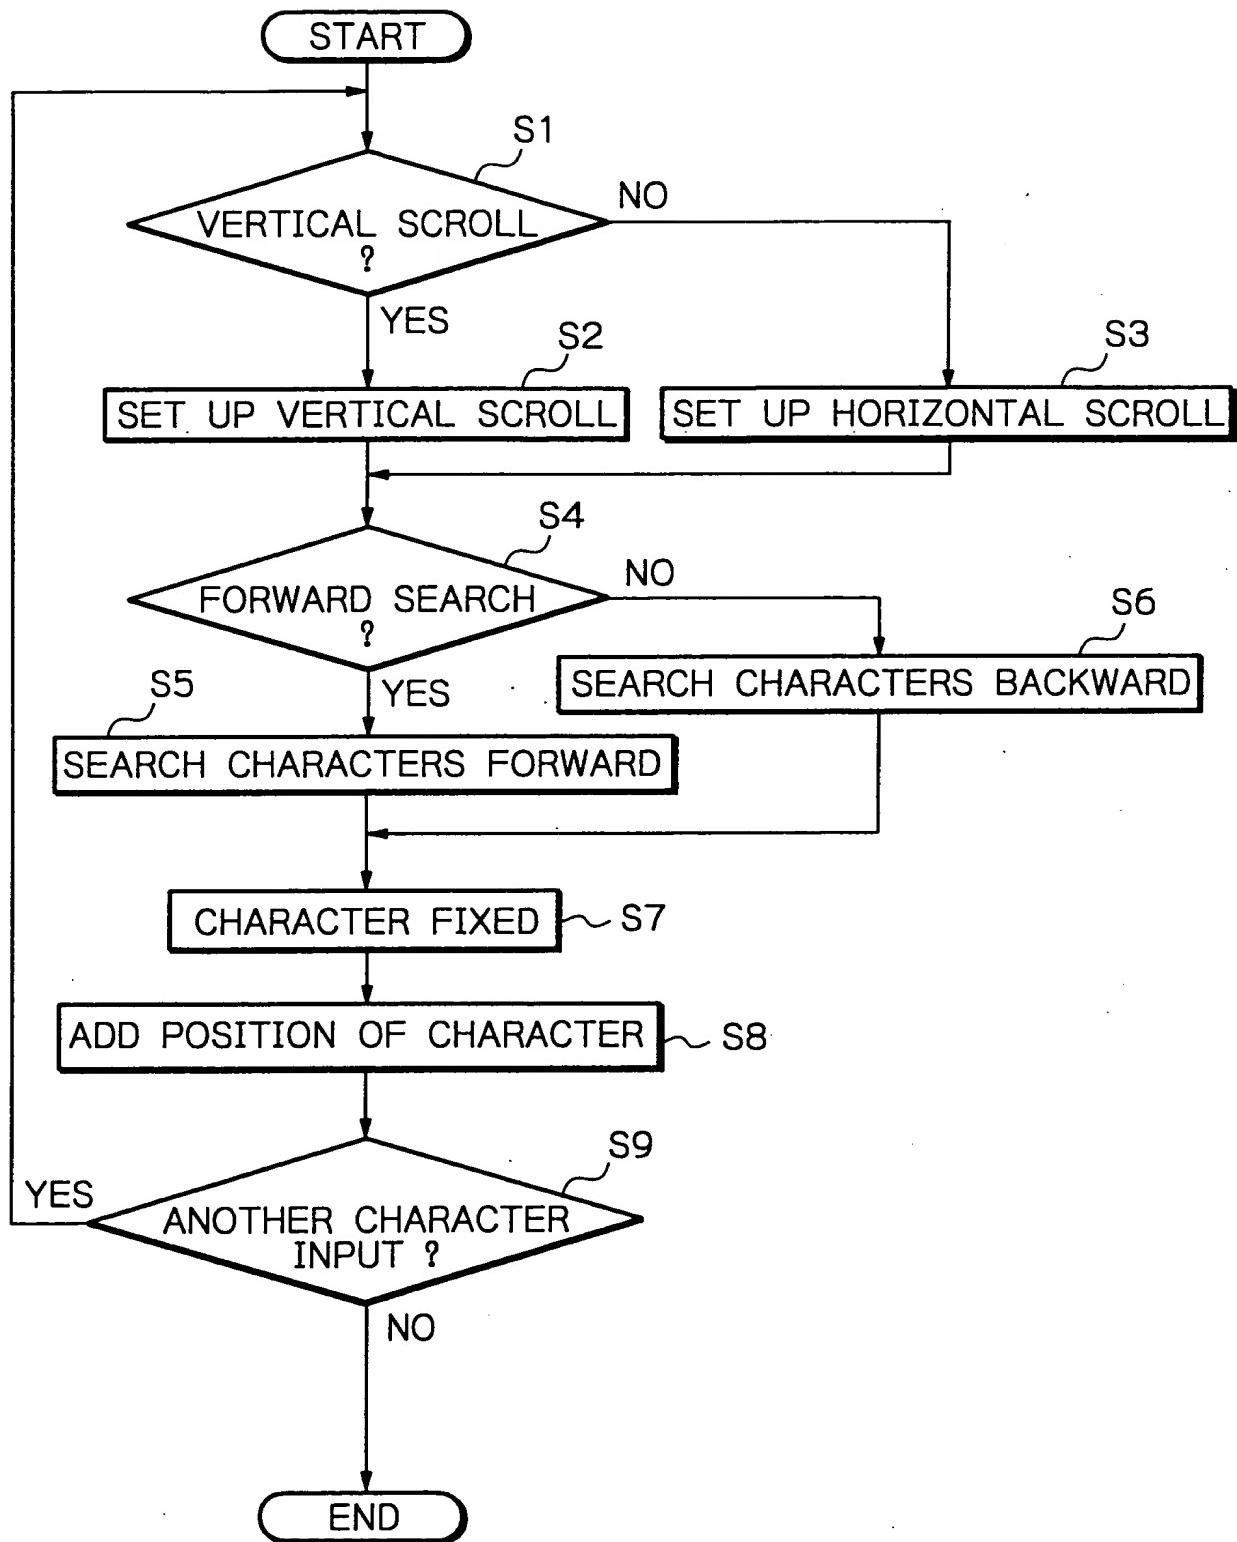


Fig. 5

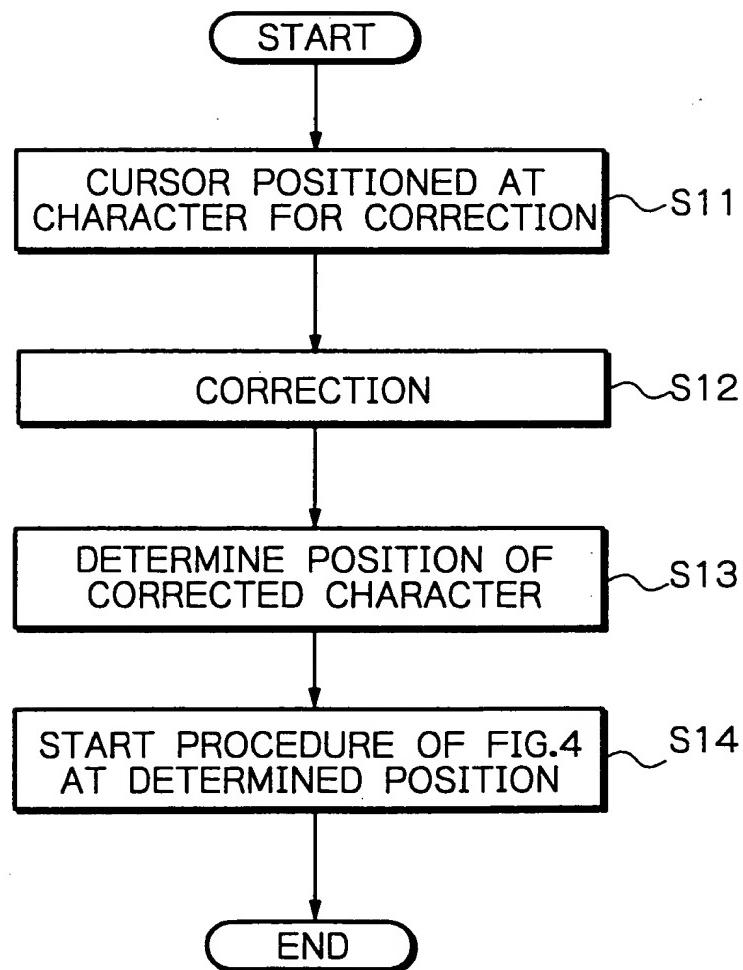


Fig. 6

BUTTON a	PRESS	SHIFT	SHIFT & PRESS
BUTTON b	FORWARD	FIX CHARACTER	MOVE CURSOR TO RIGHT
	BACKWARD	FIX CHARACTER	MOVE CURSOR TO LEFT
BUTTONS a & b	VERTICAL/HORIZONTAL SWITCHING	NONE	NONE

Fig. 7

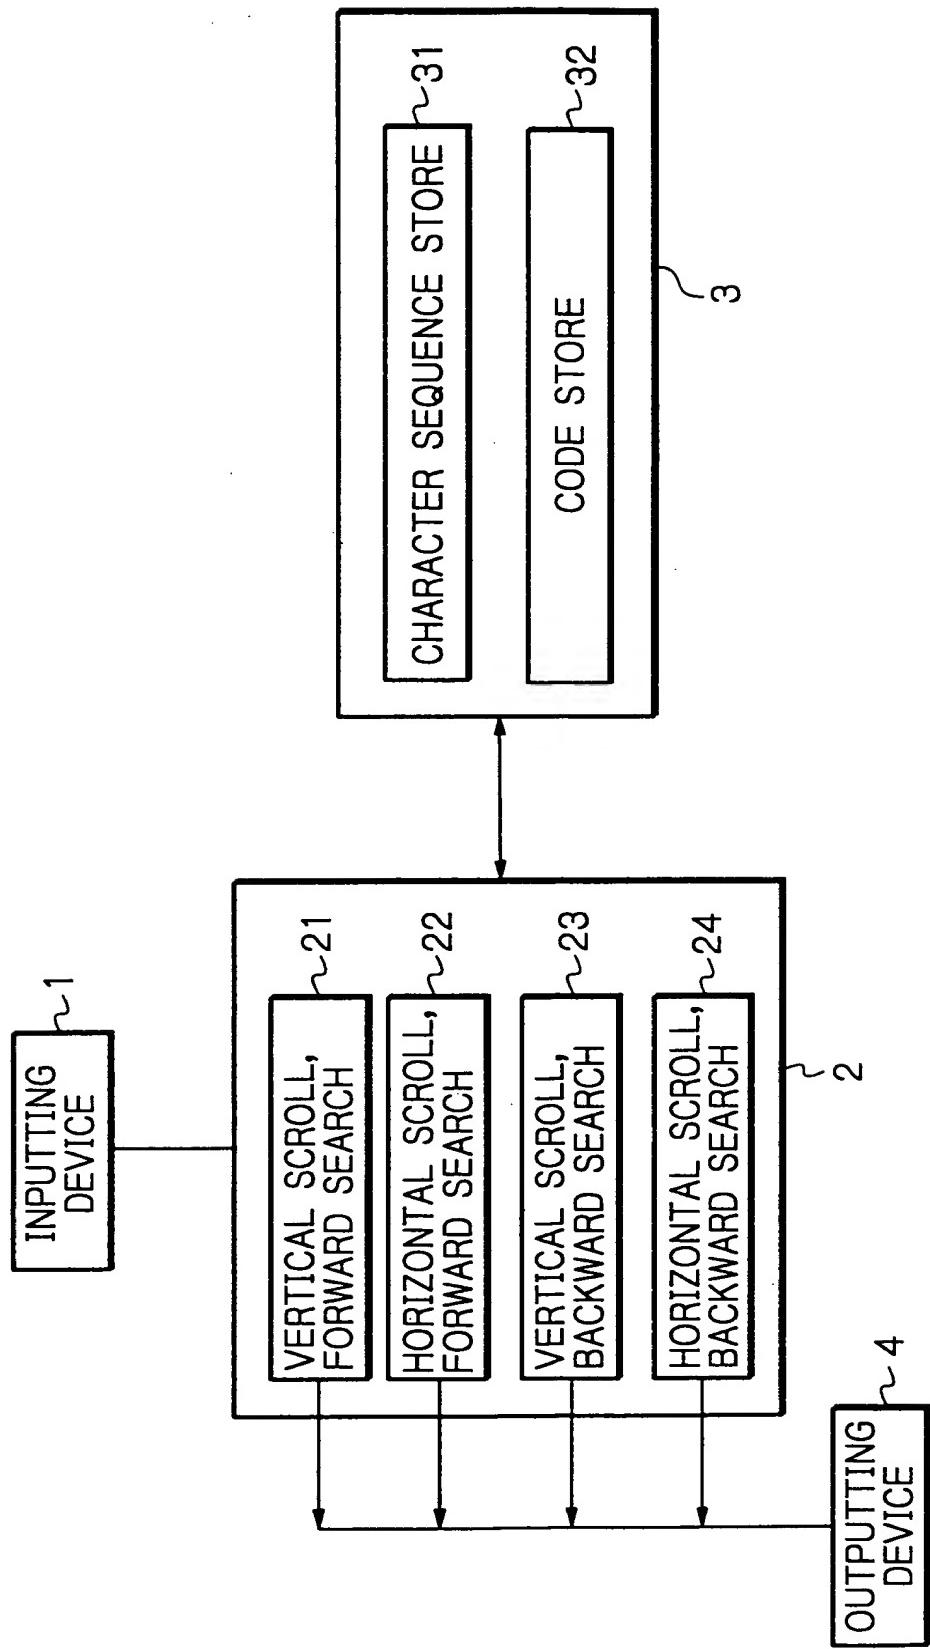


Fig. 8

